


MSF416 LED Instruction

IIN'E'S'A



Description	CCT (K)	Watt (W) (K)	Input Voltage (V)	Frequency (Hz)	Net Weight (kg)
MSF416a-LED018	3000/4000/5700	18	230	50/60	0.37
MSF416a-LED036	3000/4000/5700	36	230	50/60	0.57


Dimension: (mm)

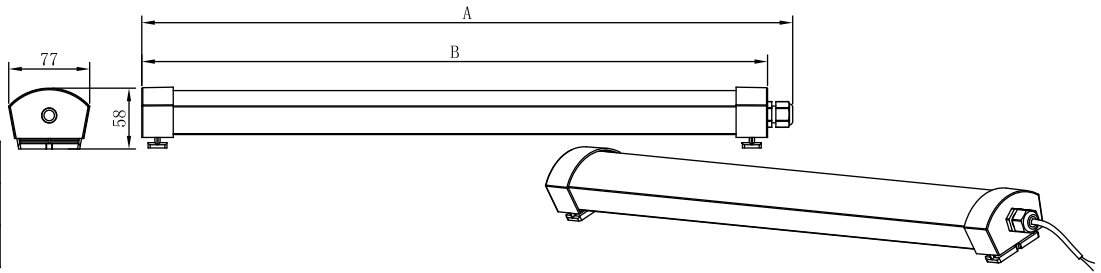

Watt(W)	A(mm)	B(mm)
18	622	598
36	1250	1226


Installation:

Hoisting:

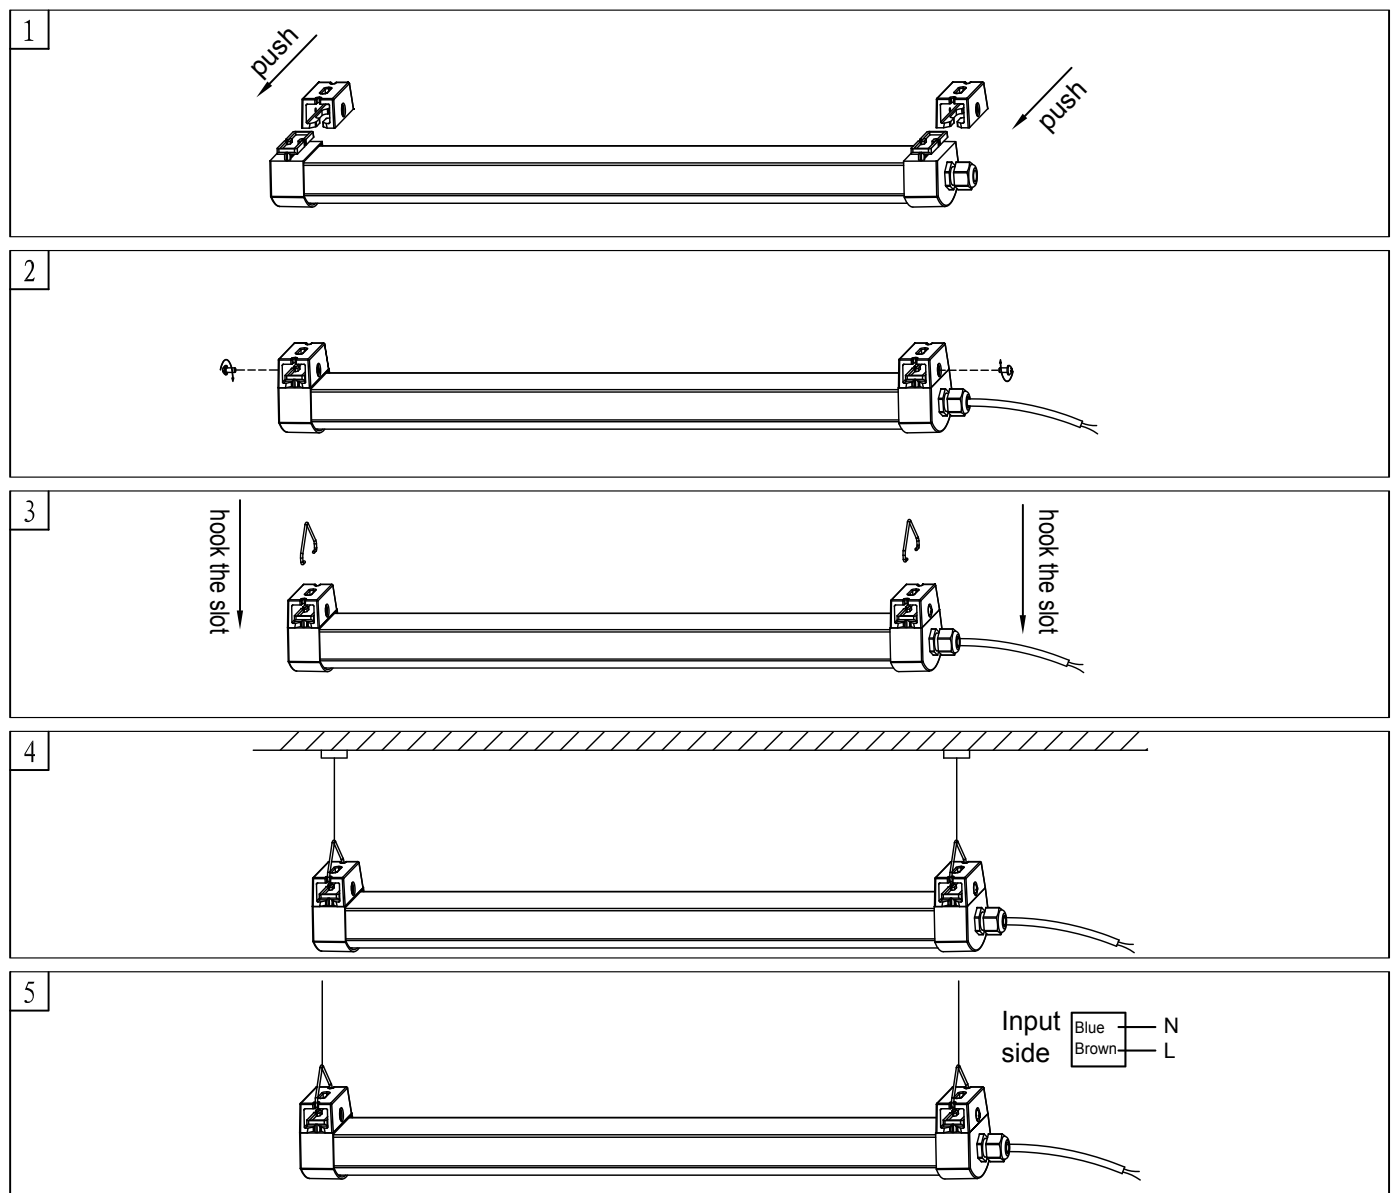


Wall mounting:


1

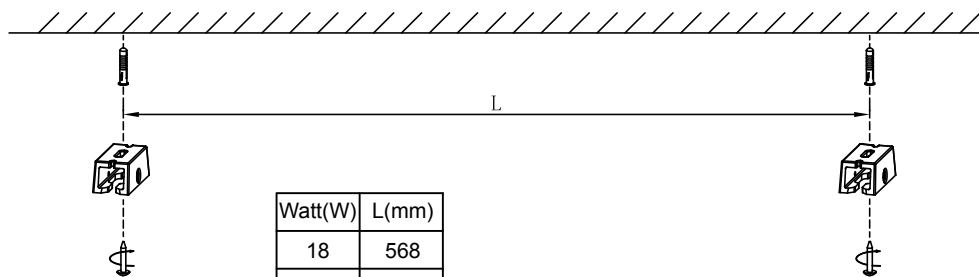


2

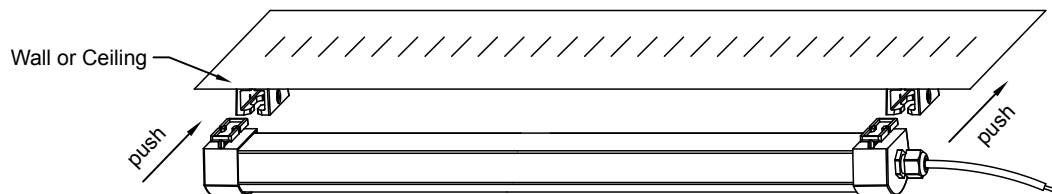






3

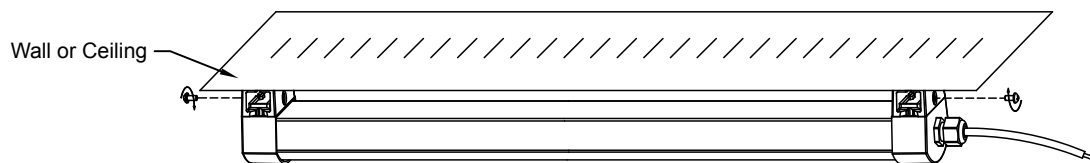

4

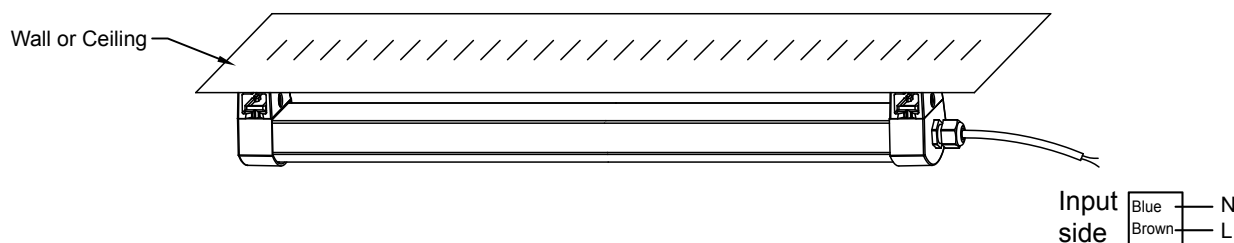

Accessories:

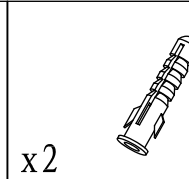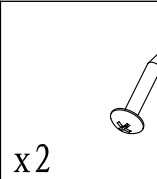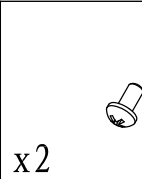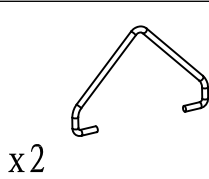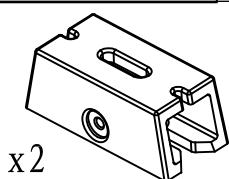

Caution:



1. Turn power off before installation or removal.
2. The luminaire shall be installed and maintained by qualified personel only, according to the local regulations.
3. Luminaire shall be installed and operated according to its voltage and thermal ratings as shown on the product label.
4. Do not disassemble the luminaire.
5. Please ensure that the instructions are properly followed, the warranty is void otherwise.

1. A világítóttest fel- illetve leszerelése előtt feszültségmentesítse a hálózatot!
2. A helyi előírások betartása mellett, a szerelést csak arra képzett személy végezheti.
3. A világítóttest csak az adattáblán feltüntetett feszültség és hőmérsékleti értékek betartásával üzemeltethető.
4. Ne szerelje szét a világítóttestet!
5. Tartsa be a szerelési utasításban foglaltakat!